


NOTE: Use SANDEN -or- SELTEC COMPRESSOR
 with 5-1/4" TWO GROOVE CLUTCH.
 COMPRESSOR DRIVE BELT: 17370 - or - 9370

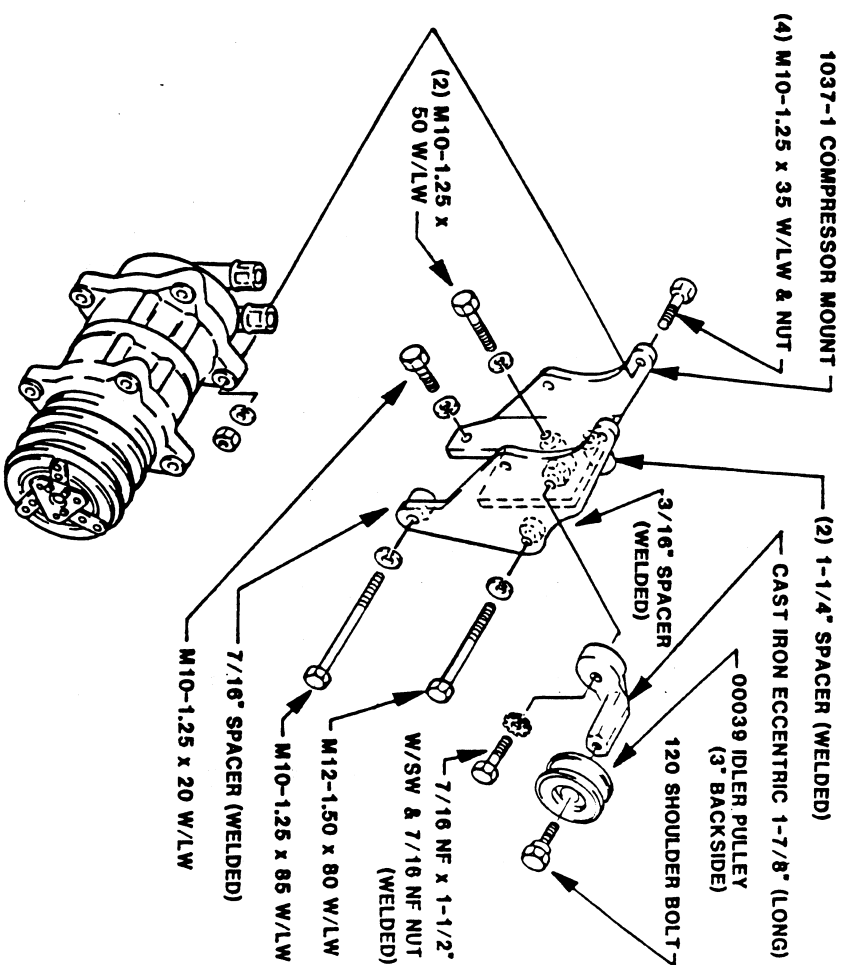

KIA SPORTAGE

**2.0 LITER
 SINGLE OVERHEAD CAM
 WITH POWER STEERING**

1037

09-29-95

KIA Sportage
2.0 Liter
SOHC 4 Cyl.
W/PS

PACKING LIST 1037

1	1037-1 Compressor Mount	2	M10 x 1.25 x 50 Bolts
1	17370 Belt	1	M10 x 1.25 x 85 Bolt
1	1-7/8 Eccentric	1	M12 x 1.50 x 80 Bolt
1	#120 Shoulder Bolt	4	M10 x 1.25 Nuts
1	00039 Idler Pulley 3" Backside	8	M10 Lockwashers
1	7/16 NF x 1 1/2 Bolt	1	M12 Lockwasher
1	M10 x 1.25 x 20 Bolt	1	7/16 Starwasher
4	M10x 1.25 x 35 Bolts		

Installation Instructions
Use Sanden or Seltec Compressor
W/ Double A Groove Clutch

1. Disconnect battery.
2. Using compressor mount and schematic as a guide, remove necessary bolts from engine.
3. Install compressor mount to engine using hardware noted on schematic. Tighten all bolts uniformly and securely.
4. Install compressor to mount using hardware noted on schematic. Tighten all bolts uniformly and securely.
5. Install Idler assembly to mount using hardware noted on schematic.
6. Wrap drive belt per belt wrap diagram.
7. Tighten belt to proper tension and tighten eccentric securely.
8. Connect battery.

CAUTION: BEFORE RELEASING VEHICLE TO CUSTOMER- Check all Radiator Hoses, Heater Hoses, and Oil Lines to be sure there is proper clearance of Compressor, Compressor Mount and Compressor Clutch.